

Operating Overview

For Model AC900 and AC890 Stations

For all procedures shown, manifold and tank valves must be open.

This does not replace the instruction manual. Before operating the unit, read and understand the manual. Observe all warnings.

Recover - Automatic

Connect station hoses to A/C system.

Turn Main Power switch ON.

Press RECOVER on keypad.

Evacuate and Recycle - Automatic

Press MODE on keypad.

Using the arrow keys, enter required evacuation time.

Press ENTER on keypad.

Press VAC/RECYCLE on keypad.


Recharge

Press CHARGE to display CHARGE and LBS.

Press MODE and the arrow keys to enter amount of refrigerant to be charged.

Press ENTER on keypad.

Press CHARGE on keypad.

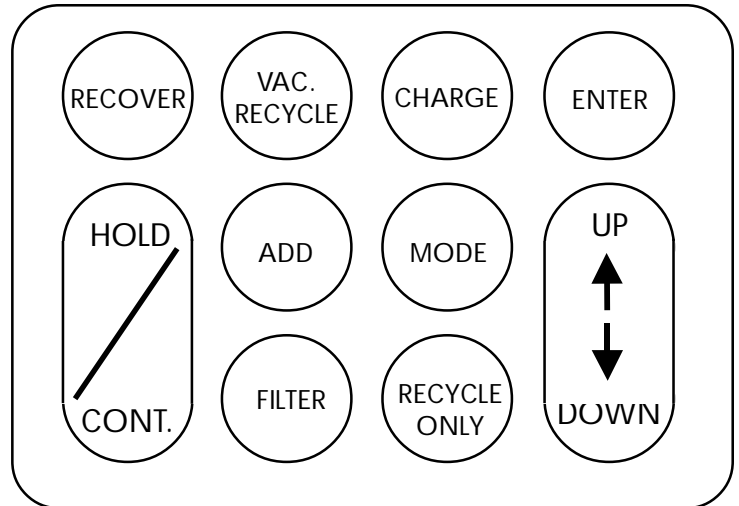

Evacuate - Manual

Press MODE and ENTER at the same time.

Press UP arrow until display reads FOI.

Press ENTER.

Press SHIFT/RESET to end.

Recycle - Manual

Press RECYCLE ONLY.

Adding Refrigerant to the Tank

Follow diagram for connections to source tank. Close LIQUID valve on tank before disconnecting blue LIQUID hose.

For R-12 source tanks, connect 6" yellow adapter to tank fitting before connecting hose.

Open valve on source tank.

Open GAS (vapor) valve on unit's tank.

Press ADD.

Display shows amount transferred to tank.

Transfer stops automatically when source tank is empty or when weight in station tank reaches 15 pounds. Display shows "CPL."

Close source tank valve and disconnect blue hose (or 6" yellow adapter fitting, if used) from source tank. Reconnect blue hose to LIQUID valve of tank.

