17518 COALESCING FILTER KIT



Installation Instructions

CAUTION: To prevent personal injury and/or equipment damage,



- Wear personal protective equipment that meets ANSI/ISEA and OSHA standards.
- Use only the Parker 15F22EA filter supplied in this kit. All performance tests and claims are based on using this specific filter.

Replacing Existing Parker Coalescing Filter

If your machine has a Parker 15F22EA filter installed:

- Replace the existing Parker coalescing filter with the Parker 15F22EA filter supplied in the kit (Figure 1).
- Disregard the 3/8" x 2" pipe union supplied in the kit and use the existing pipe fittings on your machine.



Figure 1

17518 COALESCING FILTER KIT



Replacing Discontinued Ingersoll Rand Filter

If your machine has a discontinued Ingersoll Rand F25231-310 filter installed:

- Replace the discontinued Ingersoll Rand F25231-310 filter (Figure 2) with the Parker 15F22EA supplied in the kit.
- Replace one of the two 3/8" x 1.5" pipe unions from the existing configuration with the 3/8" x 2" pipe union supplied in the kit (Figure 3). This longer pipe union accounts for the 1/2" smaller width of the new Parker 15F22EA filter.

Figure 2


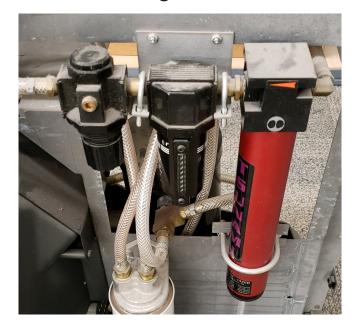


Figure 3



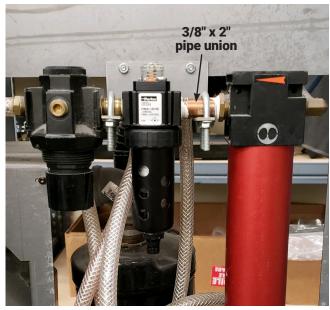

For more information, call TOLL-FREE 1-800-822-5561 in the continental U.S. and Canada. In all other locations, contact your local distributor.

Because of ongoing product improvements, we reserve the right to change design, specifications, and materials without notice.



655 Eisenhower Drive Owatonna MN 55060

Technical Service : 1-800-822-5561 Fax : 1-866-259-1241 Customer Service: 1-800-533-6127

Fax : 1-800-332-2890 Website : www.robinair.com